




IMPRESSA C5 – Quick Reference Guide

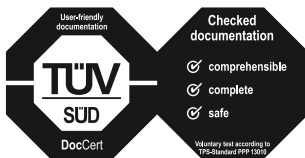


The 'IMPRESSA Manual' and this 'IMPRESSA C5 – Quick Reference Guide' have together been awarded the seal of approval by the independent German Technical Inspection Agency, TÜV SÜD, due to their easy-to-understand style, their thoroughness and coverage of safety aspects.







This Quick Reference Guide does not replace the 'IMPRESSA C5 Manual'. Please read first and take careful note of the safety and warning information to avoid any danger.

Switching on

When the IMPRESSA is switched on, a prompt to perform a rinse operation automatically appears.

Precondition: your IMPRESSA is switched on at the power switch and the On/Off symbol  is illuminated (standby).


-  ▶ Press the Rotary Switch to switch the IMPRESSA on. The machine is heating up, the Maintenance symbol  will flash. The Maintenance symbol  lights up.
- ▶ Place a receptacle under the coffee spout.
-  ▶ Press the Rotary Switch to start the rinse operation. The coffee spout will be rinsed. The operation stops automatically and your IMPRESSA is now be ready for use.



Cappuccino


 
A classic Italian recipe. The Cappuccino consists one-third of Espresso, hot milk and milk foam. It is finished with a sprinkling of cocoa powder.

Precondition: your IMPRESSA is ready to use, the Easy-Auto-Cappuccino Frother is mounted.

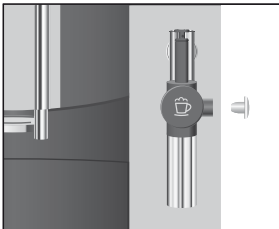

- ▶ Take the milk pipe out of the Welcome Pack.
- ▶ Take the protective cap off the Easy-Auto-Cappuccino Frother.
- ▶ Attach the milk pipe to the frother.
- ▶ Insert the other end in a milk Tetrapack or connect it to a milk container.

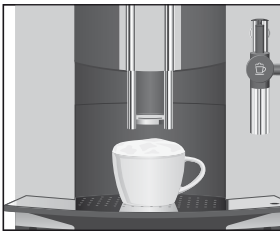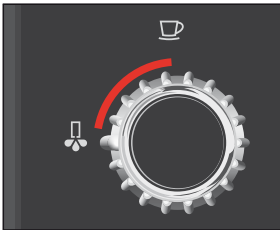



- ▶ Place a cup under the Easy-Auto-Cappuccino Frother.
- ▶ Turn the Rotary Switch so that it points to the Steam symbol .
- ▶ Press the Rotary Switch to confirm your choice. The Steam symbol  will continue flashing until the IMPRESSA has warmed up. As soon as the required temperature has been reached, the light segment by the switch will flash.
- ▶ Turn the switch in the anticlockwise direction. The milk foam will be prepared.
- ▶ Turn the switch in the clockwise direction when there is sufficient milk foam in the cup.

i As long as the light segment continues to flash on the switch, you can continue preparing milk foam.

- ▶ Move the cup under the coffee spout.
- ▶ Turn the Rotary Switch to the 1 Espresso setting .
- ▶ Press the Rotary Switch to initiate preparation of the Espresso. The 1 Espresso symbol  will now flash, and the pre-set amount of water will flow into the cup. Drink preparation stops automatically.

To ensure that the Easy-Auto-Cappuccino Frother works perfectly, you should clean it regularly. Further information on this subject can be found under 'Cleaning the Easy-Auto-Cappuccino Frother'.

Using and activating filter

Your IMPRESSA no longer has to be de-scaled if you are using CLARIS plus filter cartridges.

- i** Perform the 'Using filter' operation without a break. This will ensure that your IMPRESSA always produces its best.
- ▶ Remove the packaging on the CLARIS plus filter cartridge.



- ▶ Remove the water tank and empty it.
- ▶ Lift the cartridge holder and insert the filter cartridge into the water tank, applying a light pressure.
- ▶ Close the cartridge holder. It will lock into place audibly.
- ▶ Fill the water tank with cold, fresh tap water and reinsert.


i After two months, the filter will cease to work. Monitor the elapsed time as shown on the date plate on the cartridge holder.

Precondition: your IMPRESSA must be switched off (standby mode).

- ▶ Open the access door.



- ▶ Hold down the Filter button until the Filter indicator lights up.

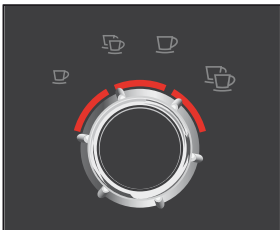


- ▶ Turn the Rotary Switch until the 3 light segments around the Rotary Switch lights up.

i When the 3 light segments light up, this means that the filter is activated. If none of the light segments light up, this means that the filter has not been activated.

- ▶ Press the Rotary Switch to confirm the setting. The light segment by the switch will now flash.

- ▶ Place a receptacle (containing at least 500 ml) under the Easy-Auto-Cappuccino Frother.
- ▶ If the milk pipe is connected, remove it.



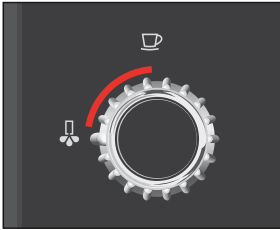

- ▶ Turn the switch in the anticlockwise direction.
Rinsing of the filter will now begin. The light segment by the switch will light up.

The water could be slightly discoloured. This is not harmful to health, nor does it affect the taste.


Rinsing of the filter will automatically stop after approx. 500 ml, and the light segment by the switch will then flash.

- ▶ Turn the switch in the clockwise direction.
The IMPRESSA will switch itself off (into standby mode). The filter is now activated.

Changing the filter

- i** After 50 litres of water have been dispensed, the filter will cease to work. Your IMPRESSA will automatically prompt you to replace the filter.
- i** After two months, the filter will cease to work. Monitor the elapsed time as shown on the date plate on the cartridge holder.
- i** If the CLARIS plus filter cartridge is not activated, you will not be prompted to change the filter.




Precondition: the Maintenance indicator and the Filter indicator  are illuminated.

- ▶ Remove the water tank and empty it.



- ▶ Lift the cartridge holder.
- ▶ Take out the old CLARIS plus filter cartridge.
- ▶ Insert the new CLARIS plus filter cartridge into the water tank, pressing it lightly.
- ▶ Close the cartridge holder.
It will lock into place audibly.
- ▶ Fill the water tank with cold, fresh tap water and reinsert.

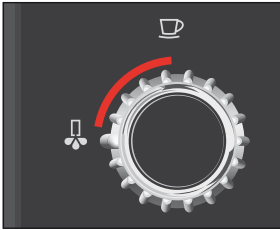

▶ Place a receptacle (containing at least 500 ml) under the Easy-Auto-Cappuccino Frother.

▶ If the milk pipe is connected, remove it.

ⓘ ▶ Hold down the Filter button until the Filter indicator ⓘ flashes.

The light segment by the switch will now flash.

ⓘ ▶ Turn the switch in the anticlockwise direction.

Rinsing of the filter will now begin. The light segment by the switch will now light up.

The water could be slightly discoloured. This is not harmful to health, nor does it affect the taste.

Rinsing of the filter will automatically stop after approx. 500 ml, and the light segment by the switch will then flash.

ⓘ ▶ Turn the switch in the clockwise direction.

The Maintenance symbol 🔥 flashes, the IMPRESSA heats up and is once again ready for use.

Cleaning the machine

After dispensing 200 cups of coffee or performing 80 switch-on rinses, the IMPRESSA will prompt you to clean it.

CAUTION

If the wrong cleaning agent is used, the machine could be damaged and/or traces of detergent could be left behind in the water.

▶ Use only original JURA care products.

i The cleaning program only lasts about 15 minutes.

i Do not interrupt the cleaning program, as this will impair the quality of cleaning.

i Your dealer will stock JURA cleaning tablets.



Precondition: the Maintenance indicator and the Cleaning indicator (⚙️) are illuminated.

- ▶ Hold down the Cleaning button until the Cleaning indicator (⚙️) flashes.

The coffee grounds container indicator ☞ now flashes.

- ▶ Empty the drip tray and the coffee grounds container.
- ▶ Insert the empty drip tray and coffee grounds container back in the machine.

The Cleaning indicator (⚙️) will now light up.

- ▶ Place a receptacle under the coffee spout.
 - ▶ Press the Cleaning button.
- The Cleaning indicator (⚙️) now flashes. Water flows out of the coffee spout.

The process is interrupted. The pre-ground coffee symbol ☞ flashes and the Cleaning indicator (⚙️) lights up.


- ▶ Open the cover of the filler funnel for pre-ground coffee.
- ▶ Insert a JURA cleaning tablet into the filler funnel.
- ▶ Close the cover of the filler funnel.

- ▶ Press the Cleaning button.
- The Cleaning indicator (⚙️) now flashes. Water flows out of the coffee spout once again.

The operation stops, the coffee grounds container indicator ☞ flashes.

- ▶ Empty the drip tray and the coffee grounds container.
- ▶ Insert the empty drip tray and coffee grounds container back in the machine.

The cleaning operation is now complete. The Maintenance symbol 🔴 flashes, the IMPRESSA heats up and is once again ready for use.

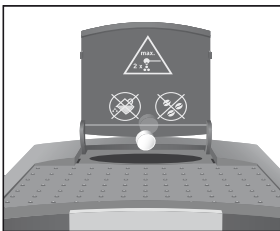

Descaling the machine

The IMPRESSA builds up deposits of limescale over time and automatically prompts you to de-scale it when necessary. The degree of calcification depends on the degree of hardness of your water.



If the descaling agent comes into contact with the skin or eyes, this can cause irritation.

- ▶ Avoid contact with the skin or eyes.
 - ▶ Rinse the descaling agent off with clean water. Should you get any descaling agent in your eye, see a doctor.
-

CAUTION

If the wrong descaling agent is used, the machine could be damaged and/or traces of detergent could be left behind in the water.

- ▶ Use only original JURA care products.
-

CAUTION

If the descaling operation is interrupted, it is possible that the machine could be damaged.

- ▶ Allow the descaling program to run to the end.
-

CAUTION

If the descaling agent comes into contact with sensitive surfaces, the possibility of damage cannot be excluded.

- ▶ Clean up any splashes immediately.
-

i The descaling program lasts approx. 40 minutes.

i Your dealer will stock JURA descaling tablets.



Precondition: the Maintenance indicator and the Descaling indicator (☰) are lit up.



(☰) ▶ Hold down the Descaling button **until** the Descaling indicator (☰) flashes.

The coffee grounds container indicator ☰ now flashes.

- ▶ Empty the drip tray and the coffee grounds container.
- ▶ Insert the empty drip tray and coffee grounds container back in the machine.

The Water Tank indicator ☰ now flashes.

- ▶ Remove the water tank and empty it.

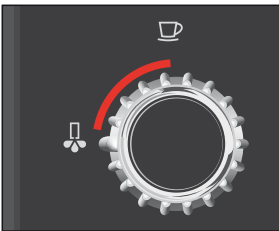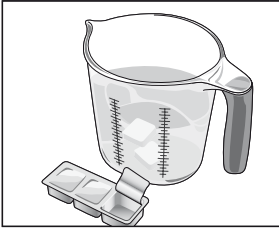

- ▶ Completely dissolve the contents of one blister (3 JURA descaling tablets) in a container that holds 500 ml of water. This can take a few minutes.
- ▶ Pour the solution into the empty water tank.
- ▶ Insert the water tank.
The light segment by the switch will now flash.
- ▶ Remove the frother.
- ▶ Place a container under the Connector System®.

- ⦿ ▶ Turn the switch in the anticlockwise direction.
This causes water to flow out of the Connector System®.
The light segment by the switch lights up during the descaling operation.
The operation stops automatically, and the light segment by the switch flashes.
- ⦿ ▶ Turn the switch in the clockwise direction.
The descaling operation will resume. After a few minutes, the coffee grounds container indicator ☞ flashes.
 - ▶ Empty the container under the Connector System®.
 - ▶ Empty the drip tray and the coffee grounds container.
 - ▶ Insert the empty drip tray and coffee grounds container back in the machine.
The Water Tank indicator ☒ now flashes.
 - ▶ Rinse the water tank thoroughly and fill it with cold, fresh tap water.
 - ▶ Put the water tank back in.
 - ▶ Place a container under the Connector System®.
The light segment by the switch will now flash.




- ▶ Turn the switch in the anticlockwise direction.
This causes water to flow out of the Connector System®. The operation stops automatically, and the light segment by the switch flashes.
- ▶ Turn the switch in the clockwise direction.
The descaling operation will resume. After a few minutes, the coffee grounds container indicator ☞ flashes.
 - ▶ Empty the drip tray and the coffee grounds container.
 - ▶ Insert the empty drip tray and coffee grounds container back in the machine.
 - ▶ Put back the frother.
The descaling operation is now complete. The Maintenance symbol 🔥 flashes, the IMPRESSA heats up and is once again ready for use.

i If the descaling operation stops unexpectedly, rinse the water tank thoroughly.

Rinsing the Easy-Auto-Cappuccino Frother

To ensure that the Easy-Auto-Cappuccino Frother works perfectly, you should rinse it with water whenever you have prepared some milk.

- i** The IMPRESSA will not prompt you to rinse the Easy-Auto-Cappuccino Frother.
 - ▶ Carefully remove the Easy-Auto-Cappuccino Frother from the Connector System®.
 - ▶ Take the Easy-Auto-Cappuccino Frother apart.
 - ▶ Rinse all the frother parts thoroughly under running water.
 - ▶ Reassemble the Easy-Auto-Cappuccino Frother and attach it to the Connector System®.

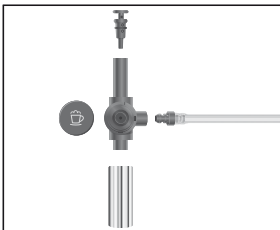

Cleaning the Easy-Auto-Cappuccino Frother

To ensure that the Easy-Auto-Cappuccino Frother works perfectly, you should clean it **daily** when you have been preparing milk.







- i** The IMPRESSA will not prompt you to clean the Easy-Auto-Cappuccino Frother.
- i** Your dealer will stock the JURA Auto-Cappuccino Cleaner.


CAUTION

If the wrong cleaning agent is used, the machine could be damaged and/or traces of detergent could be left behind in the water.

- ▶ Use only original JURA care products.

Precondition: your IMPRESSA is ready for use.


- ▶ Place a receptacle under the Easy-Auto-Cappuccino Frother.
- ▶ Pour 250 ml of fresh water into a container and add one capful (max. 15 ml) of Auto-Cappuccino Cleaner.
- ▶ Immerse the milk pipe in the receptacle.
-  ▶ Turn the Rotary Switch so that it points to the Steam symbol .
-  ▶ Press the Rotary Switch to confirm the action. The Steam symbol  will continue flashing until the IMPRESSA has warmed up. As soon as the required temperature has been reached, the light segment by the switch will flash.
-  ▶ Turn the switch in the anticlockwise direction. The frother and pipe will be cleaned.
-  ▶ Turn the switch in the clockwise direction as soon as the container holding the Auto Cappuccino Cleaner is empty. The light segment by the switch will now flash.

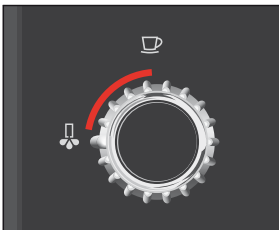



► Fill the receptacle with 250 ml of fresh water and immerse the milk pipe in it.

- i** Perform the next step as soon as the light segment by the switch is flashing. This means that the IMPRESSA has reached the temperature necessary for steam. If the light segment is no longer flashing, turn the Rotary Switch once again to the Steam symbol ☞ and press the Rotary Switch. As soon as the required temperature has been reached, the light segment by the switch will flash again.

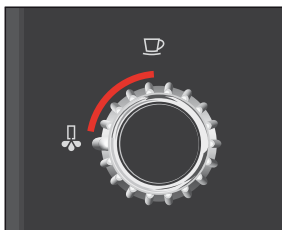

- ☞ ► Turn the switch in the anticlockwise direction. The frother and pipe are rinsed with fresh water.
- ☞ ► Turn the switch in the clockwise direction as soon as the container holding the water is empty. Cleaning of the Easy-Auto-Cappuccino Frother is now complete and your IMPRESSA is ready to use again.